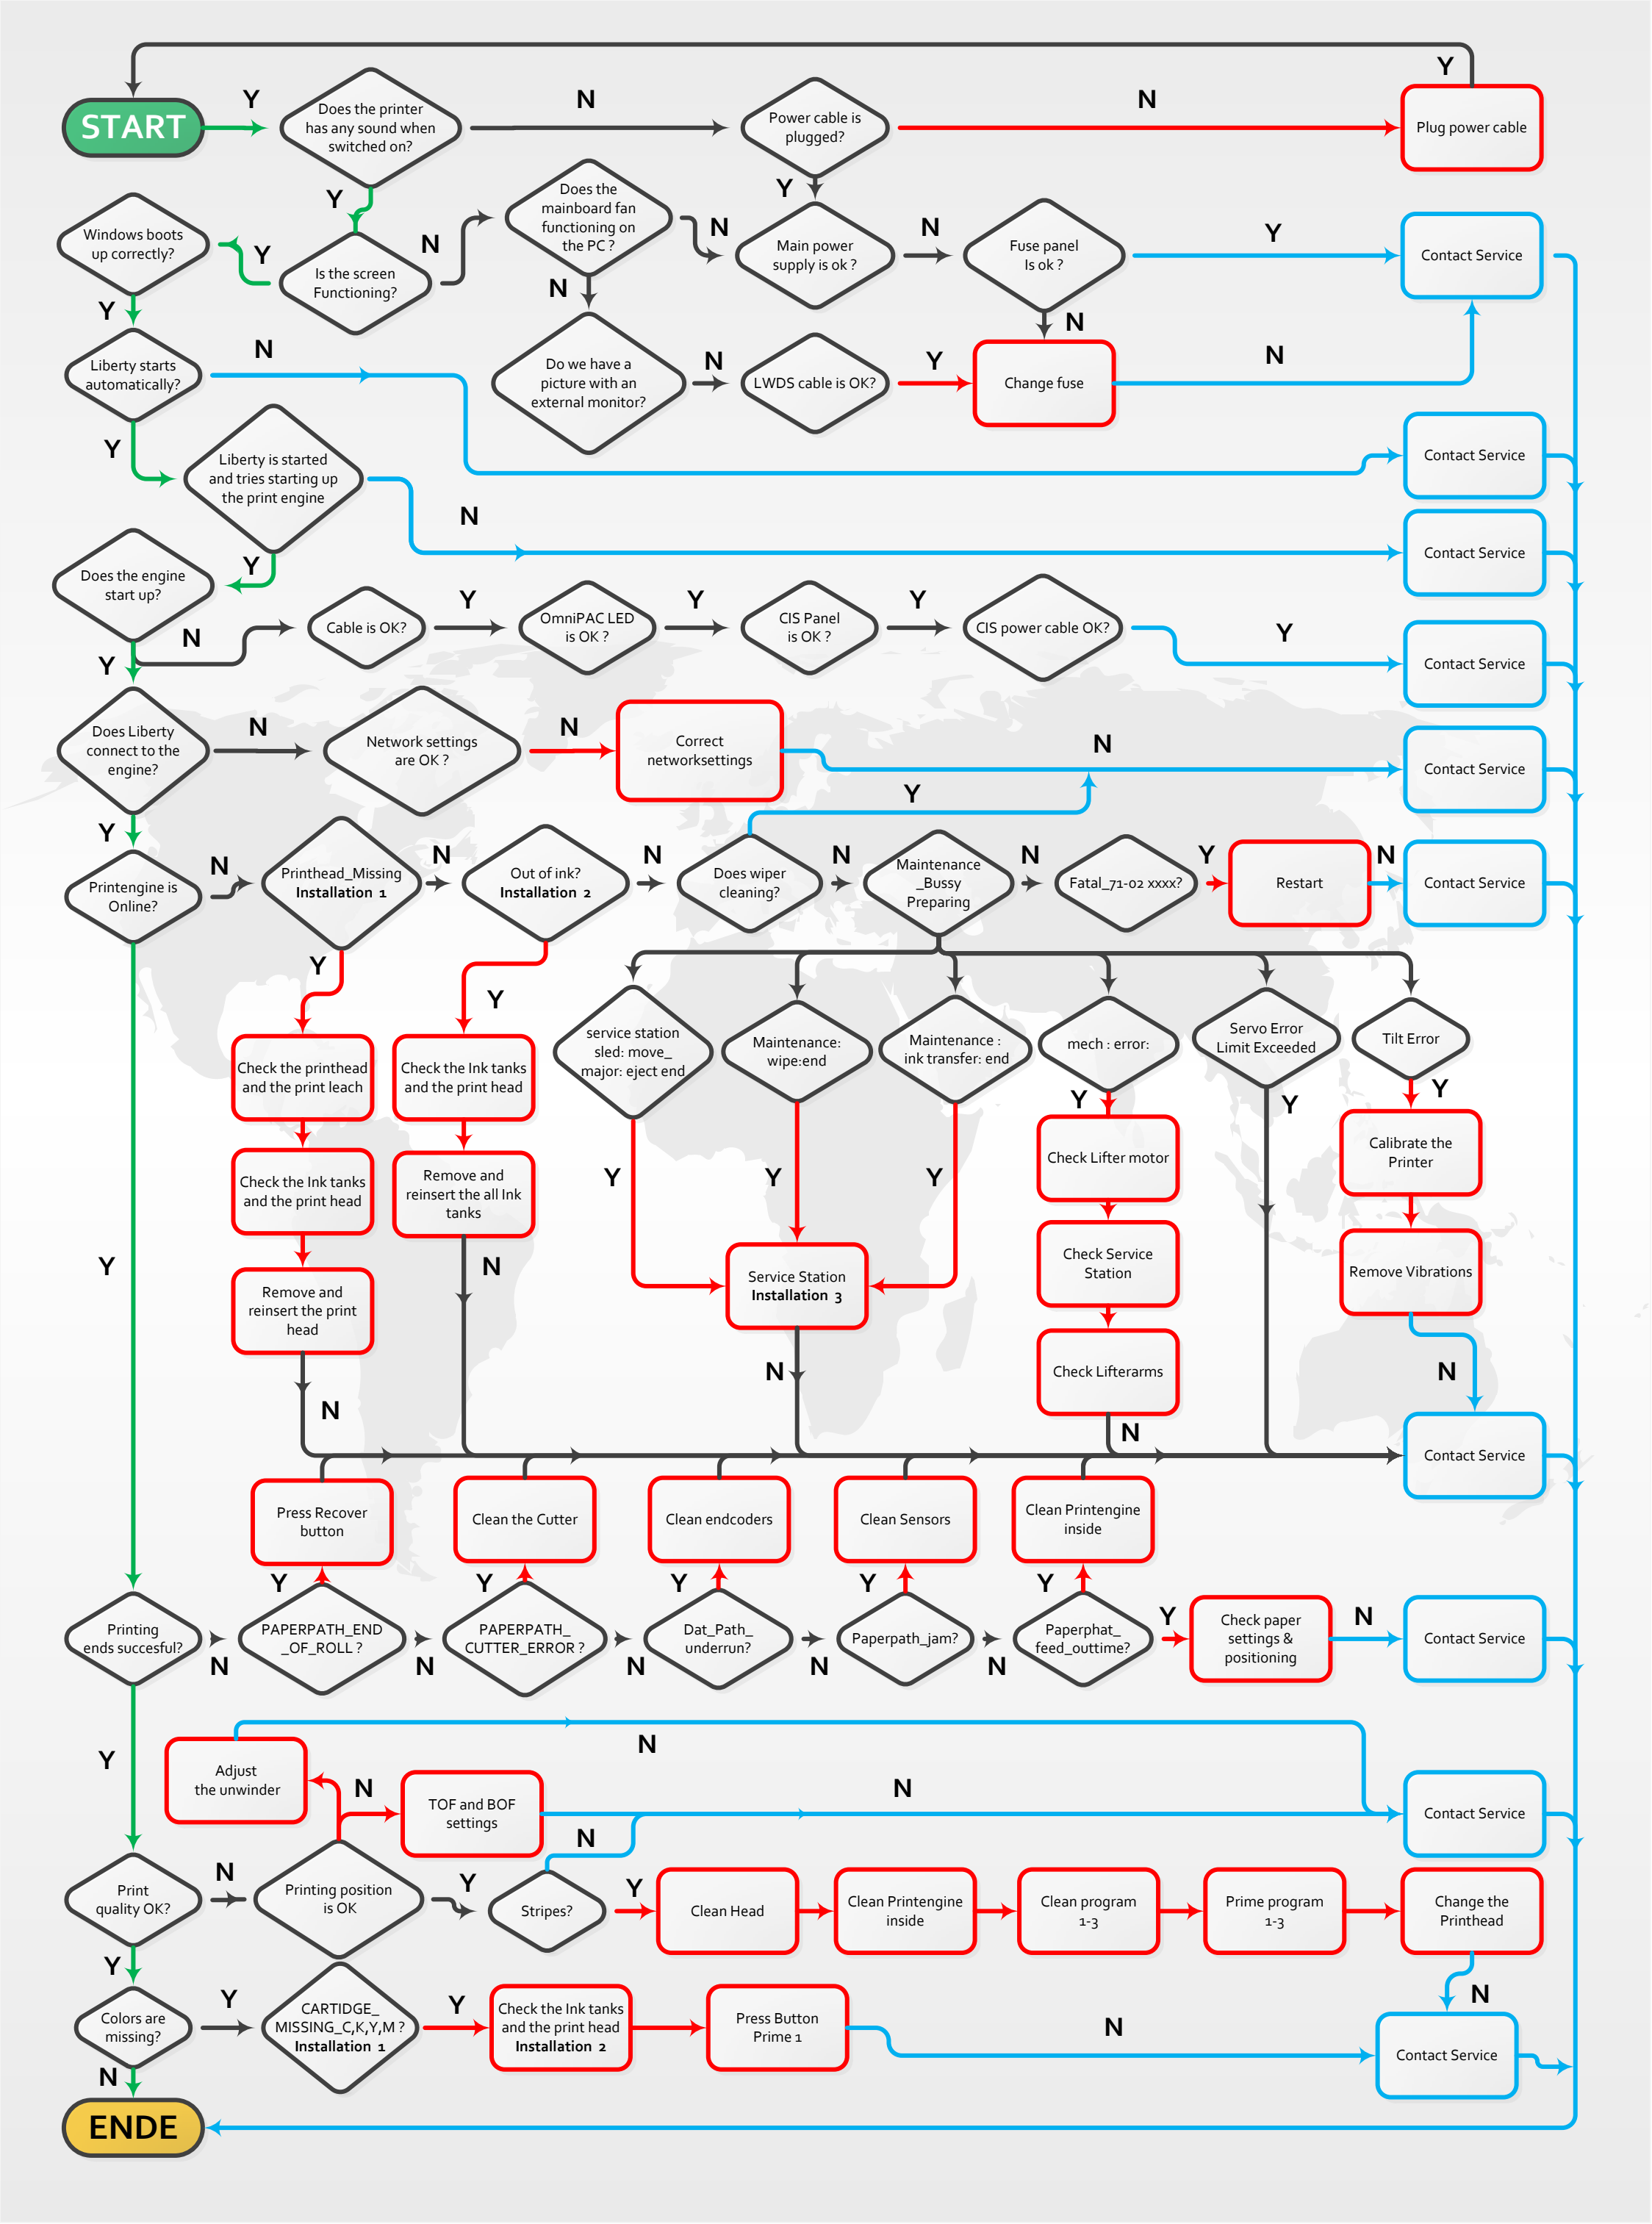
START
Does the printer has any sound when switched on?
Power cable is plugged?
Plug power cable
Windows boots up correctly?
Is the screen Functioning?
Does the mainboard fan functioning on the PC ?
Main power supply is ok ?
Fuse panel Is ok ?
Contact Service
Liberty starts automatically?
Do we have a picture with an external monitor?
LWDS cable is OK?
Change fuse
Liberty is started and tries starting up the print engine
Does the engine start up?
Cable is OK?
OmniPAC LED is OK ?
CIS Panel is OK ?
CIS power cable OK?
Does Liberty connect to the engine?
Network settings are OK ?
Correct networksettings
Printengine is Online?
Printhead_Missing Installation 1
Out of ink? Installation 2
Does wiper cleaning?
Maintenance _Bussy Preparing
Fatal_71-02 xxxx?
Restart
Check the printhead and the print leach
Check the Ink tanks and the print head
Remove and reinsert the print head
Check the Ink tanks and the print head
Remove and reinsert the all Ink tanks
service station sled: move_ major: eject end
Maintenance: wipe:end
Maintenance : ink transfer: end
Service Station Installation 3
mech : error:
Check Lifter motor
Check Service Station
Check Lifterarms
Servo Error Limit Exceeded
Tilt Error
Calibrate the Printer
Remove Vibrations
Press Recover button
Clean the Cutter
Clean endcoders
Clean Sensors
Clean Printengine inside
Printing ends succesful?
PAPERPATH_END _OF_ROLL ?
PAPERPATH_ CUTTER_ERROR ?
Dat_Path_ underrun?
Paperpath_jam?
Paperphat_ feed_outtime?
Check paper settings & positioning
Adjust the unwinder
TOF and BOF settings
Print quality OK?
Printing position is OK
Stripes?
Clean Head
Clean Printengine inside
Clean program 1-3
Prime program 1-3
Change the Printhead
Colors are missing?
CARTIDGE_ MISSING_C,K,Y,M ? Installation 1
Check the Ink tanks and the print head Installation 2
Press Button Prime 1
ENDE
Y
N